
 



Step 4. Valve and Test Cock Winter Positions

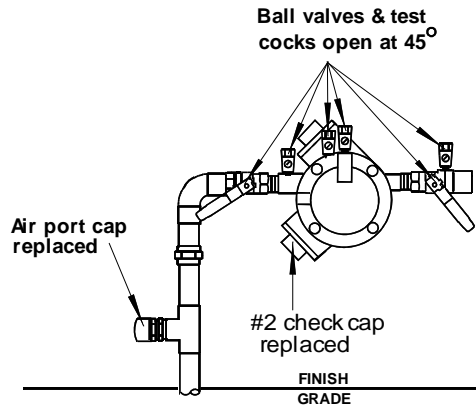

1. Leave the interior drain open over winter.
2. Leave both ball valves and all four test cocks open at 45 degrees.
3. Replace the air injection port cap.
4. Tighten relief cover bolts.
5. Tighten #2 check cap.



 **Ball Valve
open at 45°**



**Test Cock
open at 45°**

This pamphlet is designed to be a guide to help prevent damage to backflow prevention assemblies due to winterization techniques and practices. CBPA cannot be responsible for any damage which may occur to any backflow prevention assembly, irrigation system, plumbing system or component thereof as a result of using these guidelines.

Colorado Backflow Prevention
Association

Visit us: www.backflow.org

Contact us: info@backflow.org

Or visit the
American Backflow Prevention
Association

www.abpa.org

This brochure provided to the people
of

insert city name here
with the assistance of the

Colorado Backflow Prevention
Association


*insert city logo
here*

© CBPA 2005




© CBPA 2005

Winterizing Residential Irrigation Backflow Assemblies

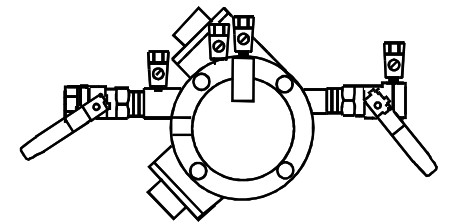


Reduced Pressure Assembly

Step 1. Shut off Water & Drain RP

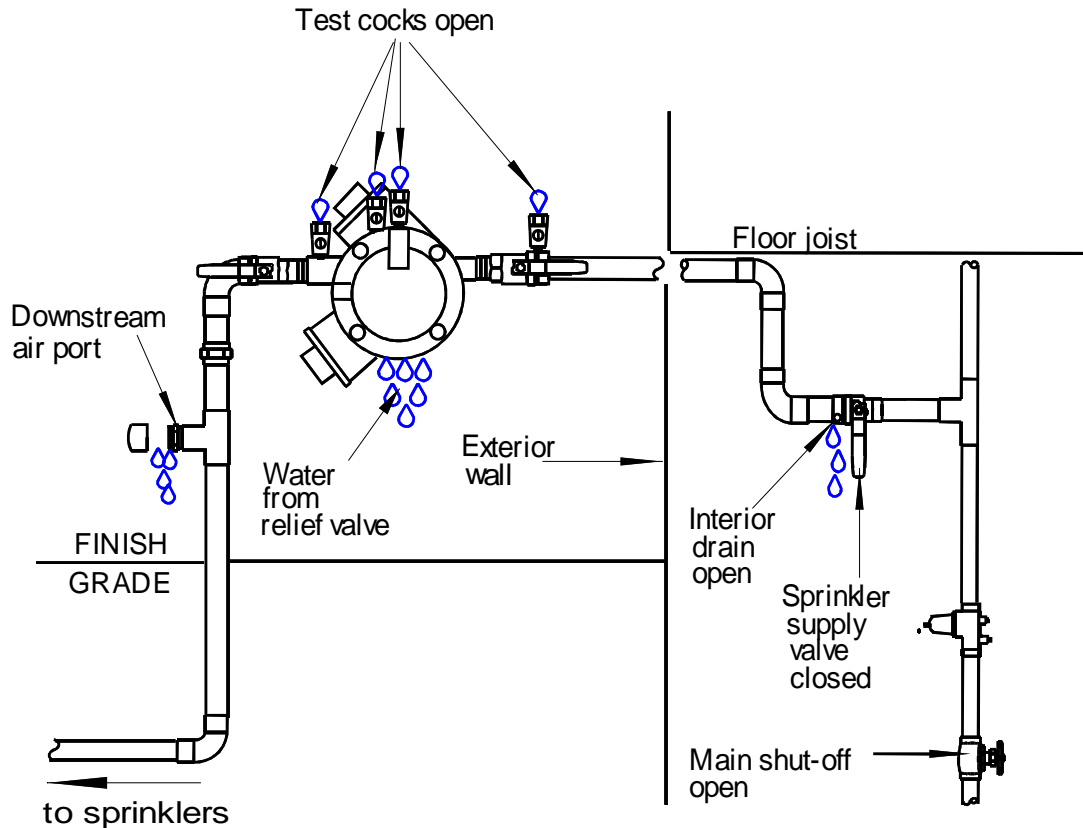

1. Close the sprinkler supply valve tight.
2. Open the interior supply drain; this may be a ball valve with drain or a boiler drain.
3. Do not close the main shut-off. Closing this will shut off the water to the house.
4. Maintain ball valves in open position.
5. Open all four cocks. Some water will drain from relief valve.
6. Remove cap from downstream air port.
7. Allow water to drain from RP and piping.


Step 2. Drain #2 Check & Relief Valve

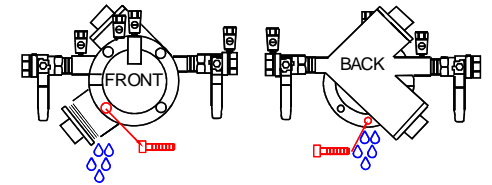

1. Loosen or remove #2 check cover until water drains from check body.
2. With all test cocks open, loosen all bolts on relief valve cover. Some water will drain.
3. Remove one of the lower bolts.
4. Thread that bolt into the threaded hole on the back of the relief valve body until the diaphragm breaks free.
5. Allow remaining water to drain from relief valve.

NEVER INJECT AIR INTO A BACKFLOW ASSEMBLY!

Step 3. Attach Compressor & Purge Water from System

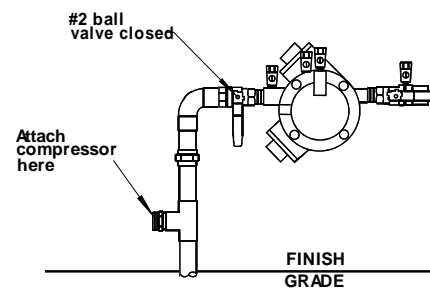

1. **CLOSE THE #2 BALL VALVE.**
2. Attach air compressor to downstream air port.
3. Set the first station on the sprinkler timer to "Run."
4. Turn on the air from the air compressor.
5. Using the sprinkler timer, run each zone until only air comes out of the heads.

Continued on Back